

PCI-compliant I/O
RS-422A/485 2ch Serial I/O board

COM-2DL-PCI



Features

-Max. 230,400bps RS-422A/485 Serial Communication

COM-2DL-PCI has two RS-422A/485-standard serial ports. Baud rates from 15 to 230,400 bps can be set.

- Boards can be used as standard serial ports when operating in a Windows® environment

These products come with a driver library that allows the boards to be used under Windows in the same way as COM ports on a PC. Under Windows, these boards support the OS-standard Win32 API communication function as well as Visual Basic MSComm. The driver library also includes a diagnostic program to confirm hardware operation and to perform communication tests.

- 16 boards (max) can be installed with an access range from COM1 to COM256.

Up to 16 boards can be installed in a single PC. COM1 - COM256 can be set using the device manager.

- Each channel is equipped with separate 64-byte FIFO buffers for transmit and receive.

Each individual channel has FIFO buffer memory (transmission: 64 bytes, reception: 64 bytes). This feature is useful for high speed communications and to reduce the load to the CPU during transmitting/receiving.

- Cables and connectors are available as optional.

9-pin D-SUB connectors (male or female type) for creating your own cables are available as optional.

-The control line for RS-422A/485 can be controlled and monitored by software.

The control lines for RTS+, RTS-, CTS+, CTS- can be controlled and monitored using an application.

This PCI board was designed for extending RS-422A/485 compatible serial communication functionality on your PC. COM-2DL-PCI has two RS-422A/485 communication ports.

With a 64 byte built-in FIFO buffer for transmission and reception of each channel, the product supports a baud rate of up to 230,400bps. It also comes with a Windows driver, which allows boards to be used as OS-standard COM ports.

Specifications

Item	Specification
Number of channels	2channels
Interface type	RS-422A/RS-485
Isolation specification	None
Isolation pressure proof	None
Transfer method	Asynchronous serial transfer (Full-duplex / half-duplex)
Baud rate	15 - 230,400bps *1 *2
Data length	5, 6, 7, 8 bits 1, 1.5, 2 stop bits *1
Parity check	Even, Odd, Non-parity *1
Loarding LSI	162850 or equivalent (Each channel has 64-byte receive and 64-byte transmit FIFO buffers.)
Connecting distance	Within 1200m *3
Interrupt requests	1 level use *4
Memory address	1024byte boundary
Power consumption (Max.)	5VDC 340mA
Operating temperature	0 - 50°C, 10 - 90%RH (No condensation)
PCI bus specification	PCI (32bit, 33MHz *5)
Dimension (mm)	121.69(L) x 88.0(H)
Connector used	9-pin D-SUB connector, 2031-2-9-P [mfd. by gallant, M(male) type] equivalent
Weight	95g

*1: These items can be set by software.

*2: Data transmission at high speed may not be performed normally depending on the environment including the type of status of connected material of cable and environment.

*3: The table below lists an example of the relationship between baud rate and communication distance.


Communication distance	Baud rate
300m	115,200bps
600m	57,600bps
900m	19,200bps
1200m	9,600bps

Communication cable : 28AWG, double shielded cable, twisted pairs used for each +/- signal line.

*4: A single interrupt signal "INTA" is output as a collection of interrupt input signals from two channels.

*5: This board requires power supply at +5 V from an expansion slot (it does not work on a machine with a +3.3V power supply alone).

Board Dimensions

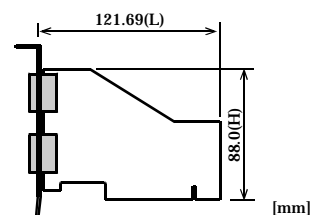

The standard outside dimension (L) is the distance from the end of the board to the outer surface of the slot cover.

Support Software

Standard COM Driver Software “COM Setup Disk” (Included)

The purpose of this software is to allow the CONTEC serial communication boards to be used under Windows in the same manner as standard computer COM ports. By installing additional boards, you can use COM ports in the range COM1 - COM256.

The boards can be used for all types of serial communications including remote access service (RAS) and uninterruptible power supply (UPS) applications.

Under Windows, the serial ports can be accessed using the standard Win32 API communication routines (CreateFile(), WriteFile(), ReadFile(), and SetCommState(), etc.) The serial ports are also compatible with Visual Basic communication control (MSComm).

Operating environment

Operating Systems: Window Vista, XP, Server 2003, 2000
You can download the latest software versions from CONTEC's [document site](http://www.contec.com/comdrv/) (<http://www.contec.com/comdrv/>).

For more details on supported operating systems, applicable languages and new information, please visit CONTEC's Web site.

Optional Cables and Connectors

9-pin D-SUB (female) connectors (5 peaces)

: CN5-D9F

Packing List

- Board (COM-2DL-PCI) ...1
- First step guide ...1
- COM Setup Disk (CD-ROM *1) ...1

*1:The CD-ROM contains the driver software and User's Guide.

Connection to External Devices


In addition to connecting directly to the board's connector, you can also connect external devices via a connection distribution cable or connection distribution unit.

Connecting directly to the port connector


If you are connecting an external device directly with the connector on the board, make your own cable using the optional CN5-D9F connector.

Pin Assignment

Interface Connector

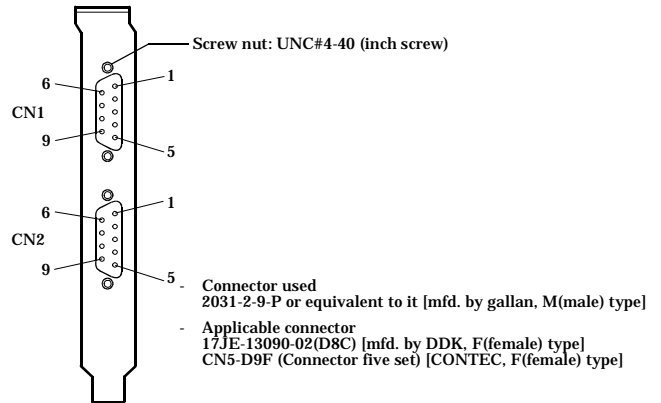

Pin Assignments of Interface Connector

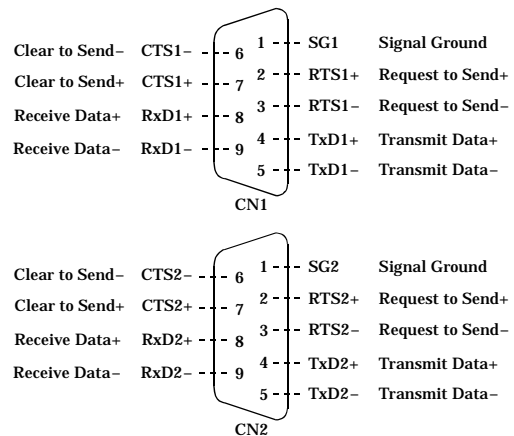


⚠ CAUTION

For TxD, RxD and RTS, the positive terminal is the even numbered pin and the negative terminal is the odd numbered pin. For CTS, even-numbered pins are assigned to “-”, and the odd-numbered pins are assigned to “+”, which is in reverse from the other signals. This is however not a notation error.


Types of Cables and Connection Examples

The figures below show examples of how to connect the cable for the board. The RS-422A/485 interface works based on a differential signal whereby the signal is carried by the potential difference between two lines (+ and -). Using twisted pair cable is recommended to improve resistance to noise.


Example Connection RTS and CTS to a External Device in Full Duplex

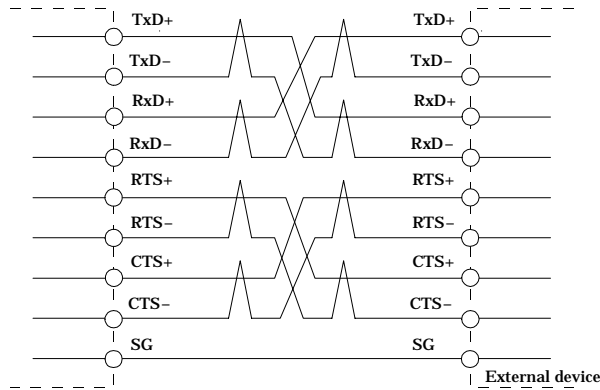

Example Connection RTS and CTS to a External Device in Full Duplex

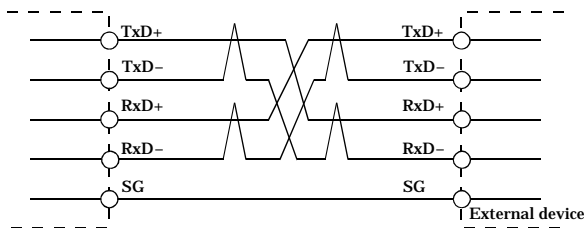

Example Connection in Half Duplex

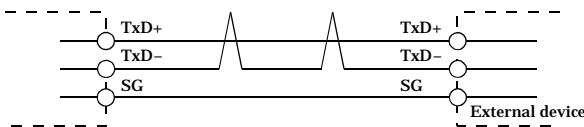

⚠ CAUTION

If you are connecting between external devices and this board with faulty wiring, it will become the cause of failure.