



\* Specifications, color and design of the products are subject to change without notice.

#### Features

# Conversion speed 10 $\mu sec/ch,$ 16bit resolution, analog input 8ch

Equipped with the analog input (10 $\mu$ sec/ch, 16bit, 8ch) and digital I/O (4ch each, LVTTL level)

# Compatible to USB1.1/USB2.0 and not necessary to power this product externally as the bus power is used.

Compatible to USB1.1/USB2.0 and capable to achieve high speed transfer at HighSpeed (480 Mbps). Not necessary to power this product externally as the bus power of USB is used.

#### Sampling can be driven by a clock or by various triggers

Sampling can be started and stopped by software or by an external trigger (timing controlled by an externally input control signal).

The sampling period can be controlled by the internal clock (high-precision timer included on the board) or by an external clock (externally input control signal).

#### Windows compatible driver libraries are attached.

Using the attached driver library API-USBP(WDM) makes it possible to create applications of Windows. In addition, a diagnostic program by which the operations of hardware can be checked is provided.

#### Easy-to-wire terminal connector adopted

Adoption of terminal connector (with screws) enables to achieve easy wiring.

#### Software-based calibration function

Calibration of analog input can be all performed by software. Apart from the adjustment information prepared before shipment, additional adjustment information can be stored according to the use environment.

# MATLAB and LabVIEW is supported by a plug-in of dedicated library.

Using the dedicated library makes it possible to create each application for MATLAB and LabVIEW.

This product is a USB2.0 compatible terminal module that extends the analog input function of USB port of PCs. 8ch/16bits analog inputs are employed and signal lines can be directly connected to the screw terminals in the system. Compact design to match Note PCs and excellent in mobility as operation is powered by USB bus. This product accompanies Windows driver and full-fledged data logger software "C-LOGGER".

Possible to be used as a data recording device for MATLAB or LabVIEW, with dedicated libraries.

## Specification

#### Encoder Input Section

Item	Specification				
Analog input					
Isolated specification	Un-Isolated				
Input type	Single-Ended Input				
Number of input					
channels	8ch				
Input range	Bipolar ±10V				
Maximum input rating	±20V				
Input impedance	1MΩ or more				
Resolution	16bit				
Non-Linearity error *7	±12LSB				
Conversion speed	10μsec/ch(Max.) *1				
Buffer memory	1K data *6				
Conversion start trigger	Software / external trigger				
Conversion stop trigger	Number of sampling times / external trigger/software				
External start signal	LVTTL level (Selecting one of the rising / falling / signal edge input to the DI00-pin by the software)				
External stop signal	LVTTL level (Selecting one of the rising / falling / signal edge input to the DI01-pin by the software)				
External clock signal	LVTTL level (Selecting the rising / falling to the DI02-pin by the software)				
Digital I/O	•				
Number of input channels	Un-Isolated input 4ch (LVTTL positive logic) *2*3				
Number of output channels	Un-Isolated output 4ch (LVTTL positive logic)				
USB	_				
Bus specification	USB Specification 2.0/1.1 standard				
USB transfer rate	12Mbps (Full-speed), 480Mbps (High-speed) *4				
Power supply	Bus power				
Common section					
Connector	14 pin (screw-terminal) plug header				
Number of terminals used at the same time	127 terminals (Max.) *5				
Power consumption (Max.)	5VDC 350mA				
Operating condition	0 - 50°C, 10 - 90%RH(No condensation)				
Physical dimensions(mm)	64(W) x 62(D) x 24(H) (exclusive of protrusions)				
Weight	90g (Not including the USB cable, attachment)				
Attached cable	USB cable 1.8m				
Compatible wires	AWG28 - 16				
*1 Conversion speed for t	he A/D converter. The minimum executable sampling cycle				

depends on the operating condition of the terminal. \*2 You cannot use both the DI00 / DI01 / DI02-pin of digital input feature and the external

start / stop signal / external clock input simultaneously. \*3 Each input accepts TTL (5VDC) level signals.

<sup>\*4</sup> The USB transfer speed depends on the host PC environment used (OS and USB host controller).

<sup>As a USB hub is also counted as one device, you cannot just connect 127 USB terminals.
1K Word (1024 data) of buffer memory are implemented.</sup> 

If (the number of channels) x (the number of camples)  $\subseteq$  1024 data, a sampling with a A/D converter's conversion rate of 10µSEC/ch is a available. However, the actual amount of data that can be stored in the buffer memory will decrease:

nowever, the actual amount of data that can be stored in the buffer memory will decrease one unit of data of the buffer memory is consumed per sampling as the internal status.

#### The following is an image of the buffer memory:

	←───			1K Data(1024 Data)						
When the number of channels is one	Status data	0ch	Status data	0ch	Status data	0ch	Status	0ch	Status data	0ch
When the number of channels is two	Status data	0ch	1ch	Status data	0ch	1ch	Status	0ch	$1 \mathrm{ch}$	Unused
When the number of channels is three	Status data	0ch	1ch	2ch	Status data	0ch	Status	0ch	1ch	2ch

Consequently, the relationship among the number of channels, the number of samplings, and the sampling clock that can be sampled as described in the specification of the hardware is as follows:

Sampling channel	number of channel	number of sampling	Sampling clock
0ch	1	512	10µsec
0-1ch	2	341	20µsec
0-2ch	3	256	30µsec
0-3ch	4	204	40µsec
0-4ch	5	170	50µsec
0-5ch	6	146	60µsec
0-6ch	7	128	70µsec
0-7ch	8	113	80µsec

In the driver data software, the buffer memory is expanded to a 256 x 1024 data. However, if the number of samplings that exceeds the table above is specified, an adjustment of the sampling clock is required for the data transfer process from the device

to the PC, which may prevent a sampling with the sampling clock above. When the ambient temperature is 0°C or 50°C, a non-linearity error (about 0.1% of the maximum range) may occur.

When a signal source with a built-in high-speed operational amplifier is used.

# **Support Software**

#### Driver Library API-USBP(WDM) (Bundled)

It is the library software, and which supplies command of hardware produced by our company in the form of standard Win32 API function(DLL). Using programming languages supporting Win32API functions, such as Visual Basic and Visual C++ etc., you can develop high-speed application software with feature of hardware produced by our company. In addition, you can verify the operation of hardware using Diagnostic programs.

CONTEC provides download services (at

http://www.contec.com/apiusbp/) to supply the updated drivers and differential files.

Further details may be found in the help within supplied CD-ROM or the homepage of our company.

< Operating environment >

OS	Windows Vista, XP, Server 2003, 2000, Me, 98				
Adaptation language	Visual Basic, Visual C++, Visual C#, Delphi, C++ Builder				

# Data Logger Software C-LOGGER (Supplied: Stored on the API-USBP(WDM) CD-ROM)

C-LOGGER is a data logger software program compatible with our analog I/O products. This program enables the graph display of recorded signal data, zoom observation, file saving, and dynamic transfer to the spreadsheet software "Excel". No troublesome programming is required.

CONTEC provides download services (at

http://www.contec.co.jp/clogger) to supply the updated drivers. For details, refer to the C-LOGGER Users Guide or our website.

< Operating environment >

OS Windows Vista, XP, Server 2003, 2000

# Data Acquisition library for MATLAB ML-DAQ (Available for downloading (free of charge) from the CONTEC web site.)

This is the library software which allows you to use our analog I/O device products on MATLAB by the MathWorks. Each function is offered in accordance with the interface which is integrated in MATLAB's Data Acquisition Toolbox. See http://www.contec.com/mldaq/ for details and download of ML-DAQ.

# Data acquisition VI library for LabVIEW VI-DAQ (Available for downloading (free of charge) from the CONTEC web site.)

This is a VI library to use in National Instruments LabVIEW. VI-DAQ is created with a function form similar to that of LabVIEW's Data Acquisition VI, allowing you to use various devices without complicated settings.

See http://www.contec.com/vidaq/ for details and download of VI-DAQ.

**Cable & Connector** 

#### **Connector (Option)**

14pin Screw Terminal Connector Set(6 pieces) : CN6-Y14

Accessories

## Accessories (Option)

: BRK-USB-Y

\* Check the CONTEC's Web site for more information on these options.


## Packing List

USB terminal [AI-1608AY-USB]...1 Interface connector plugs...2 First step guide...1 CD-ROM \*1 [API-USBP(WDM)]...1 USB Cable(1.8m)...1 USB Cable Attachment...1


Bracket for USB I/O Terminal products

\*1 The CD-ROM contains the driver software and User's Guide.

**Block Diagram** 

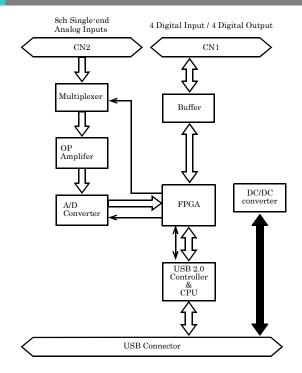


# Physical Dimensions

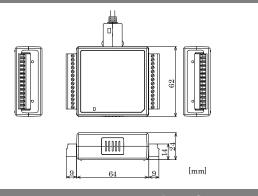


# How to connect the On-terminal Connector

#### Connecting a terminal to a Connector

To connect an external device to this terminal, plug the cable from the device into the interface connector (CN1, CN2) shown below.

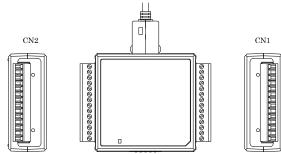

#### **Connector Pin Assignment**

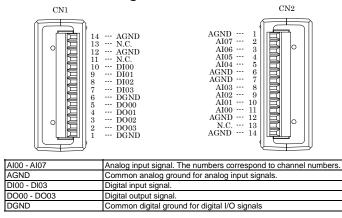


# Cable connection

When connecting the product to an external device, you can use the supplied connector plug.

For wiring, strip off approximately 9 - 10mm of the covered part of a wire rod and then insert it to the opening. After the insertion, secure the wire rod with screws. Compatible wires are AWG 28 - 16.

#### ▲ CAUTION

Removing the connector plug by grasping the cable can break the wire.

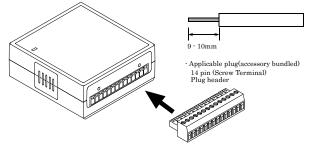

# **Analog Signal Connection**


Analog signal input types are divided into single-ended input and differential input. This product uses single-ended input fixed. The following examples show how to connect analog input signals using a flat cable and a shielded cable.

## **Single-ended Input**

The following figure shows an example of flat cable connection. Connect separate signal and ground wires for each analog input channel on CN1.

Terminal	CN1	Cable		Signal Source
AI00AI07 —	o			
AGND _	ò			<del>````</del>
$\downarrow$	:		1	

The following figure shows an example of shield cable connection. Use shielded cable if the distance between the signal source and product is long or if you want to provide better protection from noise. For each analog input channel, connect the core wire to the signal line and connect the shielding to ground.



#### **A** CAUTION

If the signal source contains over 1MHz signals, the signal may effect the cross-talk noise between channels.

If the product and the signal source receive noise or the distance between the product and the signal source is too long, data may not be input properly.

An input analog signal should not exceed the maximum input voltage (relate to the product analog ground). If it exceeds the maximum voltage, the product may be damaged.


Connect all the unused analog input channels to analog ground.

The signal connected to an input channel may fluctuate after switching of the multiplexer. In this case, the cable between this product and the signal source can be shortened or a buffer with a high-speed amplifier can be placed between the product and the signal source in order to reduce the fluctuation.


# **Digital I/O signals Connection**

The digital I/O signal can be used .as the control signal (external trigger input signal and sampling clock input signal, etc.), too. The following sections show examples. All the digital I/O signals are LVTTL (3.3VDC) level signals.

### **Digital Input Connection**



#### **Digital Output Connection**



A CAUTION

Do not short the output signals to analog ground, digital ground, and/or power line. Doing so may damage the terminal. Each input accepts TTL(5VDC) level signals. The external trigger signal is fixed to the following signal location when using C-LOGGER.

DI00 : External start trigger signal input

\* The external stop tripper and external clock cannot be used.