





CE







Model Number

OBT300-R100-2EP-IO-V31-L

Triangulation sensor (BGS) with 4-pin, M8 x 1 connector

Features

- Miniature design with versatile mounting options
- DuraBeam Laser Sensors durable and employable like an LED
- Extended temperature range -40°C bis 60°C
- · High degree of protection IP69K
- IO-link interface for service and process data

Product information


The R100 series miniature optical sensors are the first devices of their kind to offer an end-to-end solution in a small single standard design — from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks.

The entire series enables sensors to communicate via IO-Link.


The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.

Dimensions

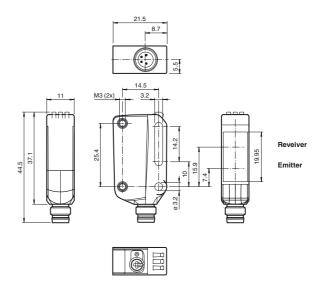


Indicators/operating means

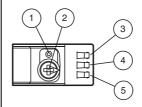

- 1 Light-on / dark-on changeover switch
- 2 Sensing range adjuster
- 3 Operating indicator / dark on
- 4 Signal indicator
- 5 Operating indicator / light on

Electrical connection

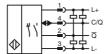

Technical data General specifications Detection range 7 ... 300 mm Detection range min. 7 ... 25 mm 7 ... 300 mm Detection range max Adjustment range 25 ... 300 mm standard white, 100 mm x 100 mm Reference target Light source laser diode modulated visible red light Light type Laser nominal ratings Note LASER LIGHT, DO NOT STARE INTO BEAM Laser class Wave length Beam divergence > 5 mrad d63 < 1 mm in the range 150-250 mm Pulse length 3 μs Repetition rate approx. 13 kHz max. pulse energy 10.4 nJ Black/White difference (6 %/90 %) < 5 % at 150 mm Diameter of the light spot approx. 1 mm at a distance of 200 mm Angle of divergence approx. 0.3 ° Ambient light limit EN 60947-5-2: 40000 Lux Functional safety related parameters $MTTF_d$ 560 a Mission Time (T_M) 20 a 0 % Diagnostic Coverage (DC) Indicators/operating means Operation indicator LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode Function indicator constantly on - object detected constantly off - object not detected Control elements Light-on/dark-on changeover switch Control elements Sensing range adjuster **Electrical specifications** Operating voltage UB 10 ... 30 V DC Ripple max. 10 % No-load supply current I_0 < 20 mA at 24 V supply voltage Protection class Interface IO-Link (via C/Q = pin 4) Interface type Device profile Transfer rate COM 2 (38.4 kBaud) IO-Link Revision 1.1 2.3 ms Min. cycle time Process data witdh Process data input 1 Bit Process data output 2 Bit SIO mode support yes Device ID 0x110602 (1115650) Compatible master port type Output Switching type The switching type of the sensor is adjustable. The default set-C/Q - Pin4: NPN normally open / light-on, PNP normally closed / /Q - Pin2: NPN normally closed / dark-on, PNP normally open / 2 push-pull (4 in 1)outputs, short-circuit protected, reverse pola-Signal output rity protected, overvoltage protected Switching voltage max, 30 V DC max. 100 mA, resistive load Switching current DC-12 and DC-13 Usage category Voltage drop U_{d} ≤ 1.5 V DC 1650 Hz Switching frequency Response time 300 μs **Ambient conditions** Ambient temperature -40 ... 60 °C (-40 ... 140 °F) Storage temperature -40 ... 75 °C (-40 ... 167 °F) **Mechanical specifications** Degree of protection IP67 / IP69 / IP69K Connection M8 x 1 connector, 4-pin Material Housing PC (Polycarbonate) Optical face **PMMA** Mass approx. 10 g

Accessories

IO-Link-Master02-USB

IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

V31-GM-2M-PUR

Female cordset, M8, 4-pin, PUR cable

V31-WM-2M-PUR

Female cordset, M8, 4-pin, PUR cable

Other suitable accessories can be found at www.pepperl-fuchs.com

Compliance with standards and directives


Directive conformity		
EMC Directive 2004/108/EC	EN 60947-5-2:2007 + A1:2012	
Standard conformity		
Product standard	EN 60947-5-2:2007 + A1:2012 IEC 60947-5-2:2007 + A1:2012	
Standards	UL 60947-5-2: 2014 IEC 61131-9:2013 IEC 60825-1:2007 EN 60825-1:2007 EN 61131-9:2013	


Approvals and certificates


UL approval E87056, cULus Listed, class 2 power supply, type rating 1

FDA approval IEC 60825-1:2007 Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007


Curves/Diagrams

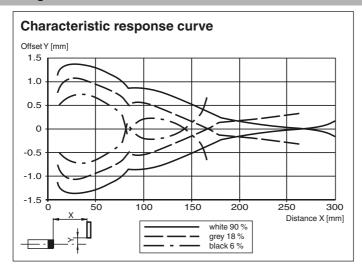

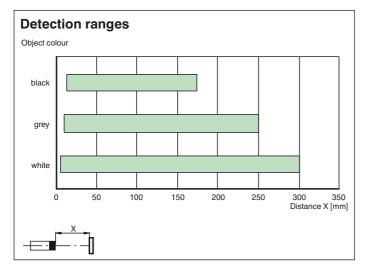

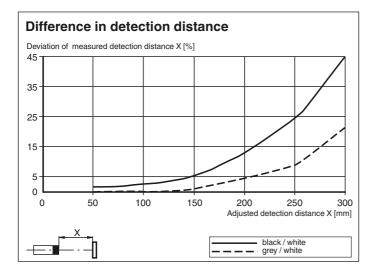

Functions and Operation

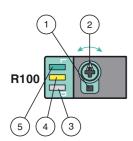

- 1 Light-on / dark-on changeover switch
- 2 Sensing range / sensitivity adjuster
- 3 Operating indicator / dark on
- 4 Signal indicator
- 5 Operating indicator / light on

To unlock the adjustment functions turn the sensing range /sensitivity adjuster for more than 180 degrees.

Sensing Range / Sensitivity

Turn sensing range / sensitivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range / sensitivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

Light-on / Dark-on Configuration

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on /dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

Restore Factory Settings

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

After 5 minutes of inactivity the sensing range / sensitivity adjustment is locked. In order to reactivate the sensing range / sensitivity adjustment, turn the sensing range / sensitivity adjuster for more than 180 degrees.